



AS2-RL Portable simultaneous li-ion battery charger

User Manual

WE STRONGLY RECOMMEND THAT YOU READ THIS INSTRUCTION BEFORE USING YOUR BEBOB AS2-RL CHARGER! PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE

Features

- 2 Channel Gold Mount simultaneous Li-Ion Charger.
- Built-in AC Adapter. 15,0V – 5.0A DC XLR4 Output
- Powerbase Mode.

Charging

- All Channel Status indicator show green when the charger is turned on with no battery connected
- The Channel Status indicator turns red when a battery is placed on the corresponding channel and the charging process has begun
- The Channel Status indicator turns back green when the battery is fully charged
- The Channel Status indicator turns Yellow when a battery is placed on the corresponding channel and the charging process fails for damage or safety reason.
- Cooling fan will be activated during the charging process

AC Adapter

- You can use your AS2-RL either as an AC Adapter or as a charger. Both functions aren't possible simultaneously
- The charging functions always has priority
- The AC adapter delivers up to 5,0A under 15,0V

Powerbase

- Plug of the AC Cord from the charger
- Place one or two full batteries on the charger
- Battery Power will be available over the XLR 4 DC Output.
- Maximum Load depends on the batteries

Safety instructions

- Only for professional use! Keep Charger out of reach of children and personnel that has not been instructed in the use!
- Use only with recommended batteries.
- Keep the charger dry and do not immerse in water.
- Do not cover the charger under use
- A standard three-pin AC plug must be used and earth pole must be connected to the earth line.
- Do not keep in contact with any part of the body while the charger is in working status.
- Do not use or store the charger in unstable, dusty or damp environments.
- Remove the battery from the charger after the charging process is complete.
- Do not attempt to open or repair the charger. Contact your dealer for help if it becomes defective.
- Handle with care! Do not throw! Do not drop!

Warranty

- The AS2-RL is covered by a 2 years unconditional warranty on all parts.
- For warranty issues or if you have any additional questions, please contact the appropriate bebob distributor listed at www.bebob.de.

Specifications

Model	AS2-RL
Mount	Gold Mount
Channel	2 simultaneous
Charging current	16,8V 2.5A
DC Output	15.0V 5.0A
DC Port	XLR4 1 minus 4 plus
AC In	90-264V/47-63Hz
Weight	1,0 Kg
Dimensions (WXHxD)	110 x 231x 141mm
Batteries	bebob, antonbauer
Charging time (bebob VS2/VS4)	depends on the battery capacity
Operating Temp. Range	- 10°C ~ + 35°C