



VS4 Portable simultaneous li-ion battery charger

User Manual

WE STRONGLY RECOMMEND THAT YOU READ THIS INSTRUCTION BEFORE USING YOUR BEBOB VS4 CHARGER! PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE

Features

- 4 Channel V-Mount simultaneous Li-Ion Charger.
- Built-in AC Adapter. 16,5V – 10.0A DC XLR4 Output
- Powerbase Mode.

Charging

- Never leave batteries unattended while charging
- All Channel Status indicator show green when the charger is turned on with no battery connected
- The Channel Status indicator turns red when a battery is placed on the corresponding channel and the charging process has begun
- The Channel Status indicator turns back green when the battery is fully charged
- The Channel Status indicator turns Yellow when a battery is placed on the corresponding channel and the charging process fails for damage or safety reason.
- Cooling fan will be activated during the charging process
- Simultaneous Fast Charging for Vmount batteries Hardware 7.9x or lower and Vcine batteries HW 7.9x or lower
- Super Fast simultaneous/sequential Charging for Vmicro batteries, Vmount batteries Hardware 8.x or higher, Vcine batteries Hardware 8.x or higher - Left Front and Right Back Channel Super Fast Charging up to 85% then Simultaneous Fast Charging of the 4 Channel

AC Adapter

- You can use your VS4 simultaneously as a 2 Channel Charger and an AC Adapter. Use the rear Channels for charging
- The charging functions of the 2 front channels always has priority over the AC function
- The AC adapter delivers up to 10,0A under 16,5V

Powerbase

- Plug off the AC Cord from the charger
- Place one or two full batteries on the front channels of the charger
- Battery Power will be available over the XLR 4 DC Output.
- Maximum Load depends on the batteries

Safety instructions

- Only for professional use! Keep Charger out of reach of children and personnel that has not been instructed in the use!
- Use only with recommended batteries.
- Keep the charger dry and do not immerse in water.
- Do not cover the charger under use
- A standard three-pin AC plug must be used and earth pole must be connected to the earth line.
- Do not keep in contact with any part of the body while the charger is in working status.
- Do not use or store the charger in unstable, dusty or damp environments.
- Remove the battery from the charger after the charging process is complete.
- Do not attempt to open or repair the charger. Contact your dealer for help if it becomes defective.
- Handle with care! Do not throw! Do not drop!

Warranty

- The VS4 is covered by a 2 years unconditional warranty on all parts.
- For warranty issues or if you have any additional questions, please contact the appropriate bebob distributor listed at www.bebob.de.

Specifications

Model	VS4
Mount	V-Mount
Channel	4 simultaneous
Charging current	16,8V 2.5A
DC Output	16,5V 10.0A
DC Port	XLR4 1 minus 4 plus
AC In	90-264V/47-63Hz 200W
Weight	1,9 Kg
Dimensions (WXHxD)	145 x 225x 270mm
Batteries	bebob, idx, sony
Charging time	depends on the battery capacity
Operating Temp. Range	- 10°C ~ + 35°C