



# COCO-FX9-A MULTI VOLTAGE GOLD MOUNT JUNCTION BOX FOR SONY PXW-FX9

**User Manual** 

WE STRONGLY RECOMMEND THAT YOU READ THIS INSTRUCTION BEFORE USING YOUR BEBOB COCO-FX9-A ADAPTER! PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE

#### **Features**


- Mounts onto the back of the SONX PXW-FX9
- Multi Voltage 5,0V, 14,4V unreg, 19,5V
- 5 Outputs (1x USB, 1 Lemo 2p, 2 Twist Dtap, 1 Cinch)
- 1 XLR4 Input with Hotswap function
- Main On-Off Switch with led for all accessories Output
- 5 led dimmable/Switchable Fuel Gauge

### **Hotswap functionality**

- Keep a BPU-35 in a camera to Swap the Vmount without interruption
- Plug an external 10-17V Power Source into the XLR4 IN to Swap the Vmount battery without interruption



#### **Fuel Gauge**

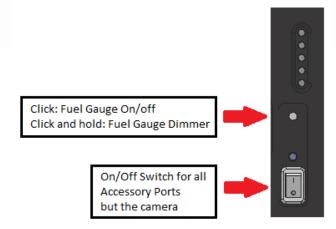

#### **Safety instructions**

- Only for professional use! Keep the COCO-FX9-A out of reach of children and personnel that has not been instructed in the use!
- Use only with recommended batteries.
- Keep the COCO-FX9-A dry and do not immerse in water.
- Do not attempt to open or repair the COCO-FX9-A. Contact your dealer for help if it becomes
  defective.
- Handle with care! Do not throw! Do not drop!
- Remove the battery from the COCO-FX9-A when not in use for a longer period of time

### Warranty

- The COCO-FX9-A is covered by a 2 years unconditional warranty on all parts.
- For warranty issues or if you have any additional questions, please contact the appropriate bebob distributor listed at <a href="https://www.bebob.de">www.bebob.de</a>.



## **Specifications**

Model	COCO-FX9-A
Material	Aluminium
Battery Mount	Gold Mount
Voltages	5,0V/14,4V unreg/19,5V
Max. Draw	Depends on battery
Twist D-Tap	2 (14,4V unreg, / max. 5.0A) Self-reset Fuse
USB Port	1 (5,0V / max. 1,0A) Self-reset Fuse
Lemo 2p	1 (14,4V unreg. / max. 2,0A) Self reset Fuse
XLR4 IN	1 (10 to 17V) Hotswap
Dimensions (WXHXD)	45x 141 x 42mm
Weight	0,43 Kg